


Barline Shadow Wall Light Installation Instructions




Product Specifications									
Model No.	HV3571T-BLK	HV3571T-WHT	HV3572T-BLK	HV3572T-WHT	HV3574T-BLK	HV3574T-WHT	HV3576T-BLK	HV3576T-WHT	
Name		Barline Shadow							
Material		Aluminium + Perspex							
Colour	Black	White	Black	White	Black	White	Black	White	
Installation Type	Wall or Ceiling - Surface Mounted								
IP Rating	IP65								
Protection Class	1 (240v Requires Earth)								
Input Voltage	240v AC								
Lamp Base	Built in LED								
Lamp Wattage	4-	4-9w		9-18w		15-30w		22-45w	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k								
Lumens	270lm, 54	270lm, 540lm, 290lm		540lm, 1080lm, 560lm		900lm, 1800lm, 975lm		1380lm, 2700lm, 1495lm	
CRI	> 80								
Wiring		Parallel							
Dimmable		No							
Warranty		3 Years Replacement*							

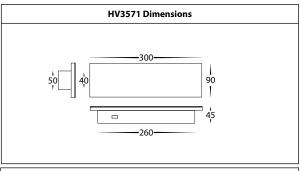

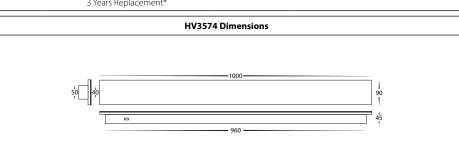

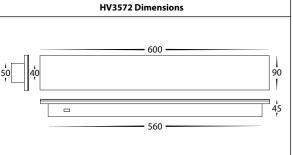

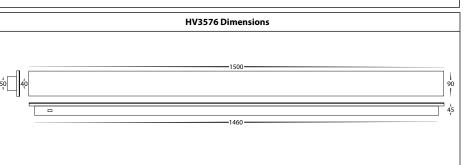

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium, 304SS, Powder Coated Brass/316SS fittings must not be installed within 5km of any salt water environments including pools
- All o-rings and seals must be in place correctly to maintain warranty
- · This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove screws from side of fitting and set aside.
- 3. Install mounting bracket to wall in desired location using appropriate screws for application.
- 4. Connect the cable.
- 5. Locate IP rated junction box within fitting. Undo screws from junction box and remove cover.
- 6. Insert cable through cable gland on junction box. If your cable is not circular you must fix entry of your cable to maintain IP rating. Failure to do so will void warranty.
- 7. Connect the cable using wire with earth. Connect earth first, then live and neutral wires.
- 8. Reattach cover to IP rated junction box making sure screws are tight and seals are still in place.
- 9. Reattach fitting to mounting bracket making sure screws are tight to avoid any water penetration.
- 10. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 11. Fitting is preset to 3000k, to change slide switch located on side of fitting to desired colour temperature.

12. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

143 Beauchamp Road Matraville NSW 2036 Australia

Contact Details:

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au

