

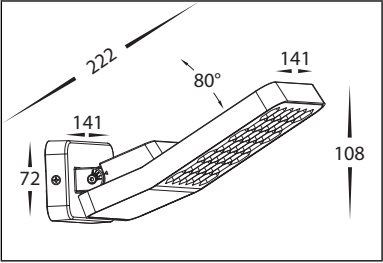
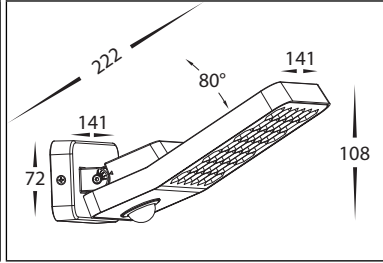
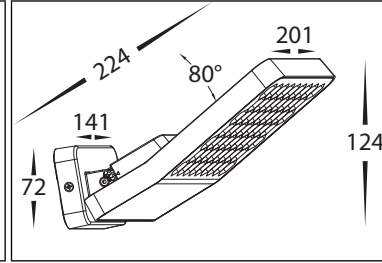
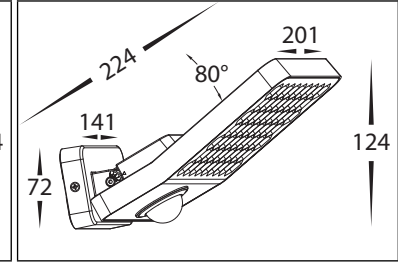


# Favo Flood Light Installation Instructions



Product Specifications				
Model No.	HV3721N-GRY	HV3721N-GRY-PIR	HV3722N-GRY	HV3722N-GRY-PIR
Name	Favo		Favo	
Material	Aluminium Body + Plastic Front		Aluminium Body + Plastic Front	
Colour	Grey		Grey	
IP Rating	IP54		IP54	
Installation Type	Wall - Surface Mounted		Wall - Surface Mounted	
Protection Class	1 (240v Requires Earth) 		1 (240v Requires Earth) 	
Input Voltage	240v AC		240v AC	
Lamp Base	Built in LED		Built in LED	
Lamp Wattage	1x 13.7w		1x 24w	
Colour Temp	4000k		4000k	
Lumens	2200lm		3000lm	
CRI	> 80		> 80	
Dimmable	No		No	
Sensor Detection Range	N/A	180°	N/A	180°
Sensor Detection Distance	N/A	Up to 12m	N/A	Up to 12m
Warranty	3 Years Replacement*		3 Years Replacement*	

HV3721N-GRY Dimensions	HV3721N-GRY-PIR Dimensions	HV3722N-GRY Dimensions	HV3722N-GRY-PIR Dimensions
			

### Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

### Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove screws from side of fitting base and set aside.
3. Remove base plate from fitting.
4. Slide cable through cable gland and place base plate against wall
5. Attach base plate to wall using appropriate screws for application.
6. Seal all holes using silicon including cable entry and around screws.
7. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
8. Reattach fitting to base plate making sure seals are still in place
9. Reattach screws to side of fitting and tighten making sure these are tight enough to avoid any water penetration.
10. Tilt fitting to desired angle by loosening allen screws on side and tighten once position is correct.
11. Slide sensor forward and adjust settings on Sensor models to desired time and lux.
12. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
13. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

### Sensor Adjustments



Must be installed by a licensed electrician

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia  
Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



www.havit.com.au

